

Adjusting Vstart for ABB/Power-one Inverters

The Vstart of the string must be kept at a value which is max. battery voltage + 50 Volts. For two battery modules, the Vstart must be kept at 200V for the MyReserve to work efficiently. To adjust the Vstart of the unit, please follow the steps below.

- a. Go to the main menu of the inverter.
- b. Press "Esc" and scroll down to "Settings"
- c. Highlight "Settings" and press "Enter"
- d. Enter the default password "0000" to enter the settings of the unit.
- e. Scroll down to "Vstart" and press "Enter"
- f. Highlight "Mppt 1 or Mppt 2" depending on the configuration of the system and press "Enter"
- g. Adjust the value as required and press "Enter" to confirm the settings.

Confirm the settings prior to leaving site and repeat if necessary.